

9230/6230 - ERROR MESSAGES

To assist the user in identifying problems with the spa, the system will display an error message. These messages will be helpful when communicating with your local dealer or qualified technician if a problem should arise.



PRESSURE or FLOW SWITCH ACTIVATED - This error will be displayed only when the pump is not activated. Cycle the pump through Low & High speeds then off. If the error does not clear this is an indication that the pressure or flow switch is activated with no water flow.

Contact your local spa dealer



PRESSURE or FLOW SWITCH NOT ACTIVATED - This error will be displayed while the pump is running. Cycle the pump through Low & High speeds. If the error does not clear this is an indication that the pressure or flow switch has not activated although there is water flow.

Contact your local spa dealer



TEMPERATURE SENSOR MALFUNCTION - This error will occur when a problem with the temperature sensor exists. This error may also occur if the system is activated while the water temperature is below 35BF.

Contact your local spa dealer



OVERHEAT or HIGH-LIMIT PROTECTION - There are three(3) stages of over-temperature:

1 - The spa water has exceeded 112°F. The heater, pump and accessory will be deactivated until the water cools to 109°F. *Be sure to check the actual water temperature with an accurate thermometer.*

2 - The spa water has exceeded 119°F. The heater will deactivate while the pump and accessory will still operate. *The blower (if equipped) can be activated to help cool the water. **WATER MUST BE BELOW 119°F AND POWER MUST BE RESET TO CLEAR THE "HL" ERROR***

A dirty spa filter can also cause a restricted flow of water, be sure the filter is cleaned regularly and ensure all water shutoff valves are open.

If the system has been operating normally until now, the pump may be overheating the spa. Refer to "Programming Filtration" on page X and reduce the duration and/or number of cycles per day.

3 - If you've eliminated items 1 & 2 as problems, the high-limit sensor may have malfunctioned.

Contact your local spa dealer



FREEZE PROTECTION - There are two(2) levels of freeze protection integrated into the system.

1 - SMART WINTER MODE, this mode will activate any time the temperature falls below 59°F. This mode will be active for a period of 24-hours. In this mode, if a pump has not been activated in the last 2 hours, the system will automatically turn it on for 1-minute to prevent freezing. The "Filter Cycle" indicator will illuminate while this mode is active.

2 - If the spa water temperature drops below 49°F, the heater & pump will be activated until the water temperature reaches 50°F. **While freeze protection is active no other functions will be possible.**



HYDROQUIP™

510A N. Sheridan Street · Corona, CA 92880-2024


Email: info@hydroquip.com · Internet: <http://www.hydroquip.com/>

Telephone: 951.273.7575 · Fax: 800.332.7190

9230/6230 VOLTAGE CONNECTION

All Universal systems leave the factory configured for 120-Volt input power (Option 1).

OPTION 1

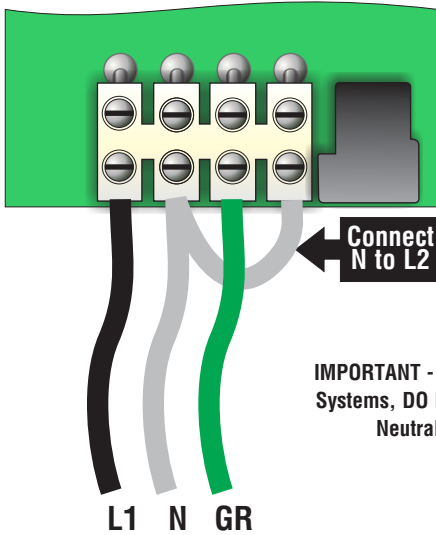


IMPORTANT - 3-Wire 240V Systems, DO NOT Connect Neutral Wire

120-VOLT ELECTRICAL SERVICE REQUIREMENTS:

Line 1, Neutral and Ground.

Note: For 120V operation Line 1 & Line 2 **MUST** be connected for system to operate properly.

OPTION 2

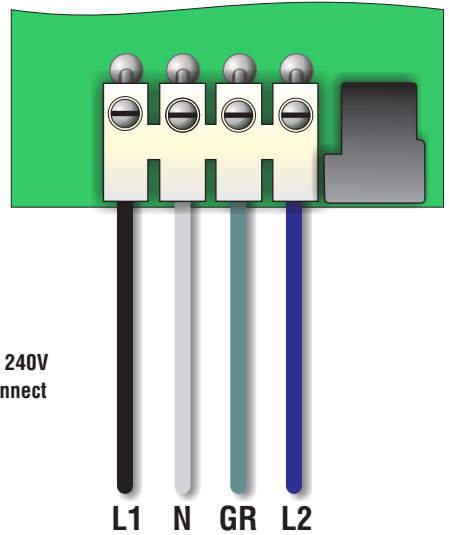


240-VOLT ELECTRICAL SERVICE REQUIREMENTS:

Line 1, Line 2, Neutral and Ground.

IMPORTANT: Always refer to the product data label (located on top of control box) for specific electrical information.

9230/6230 LOW LEVEL PROGRAMMING

It is possible to change the parameters of the system by positioning specific jumpers located on the system board (see illustration below).

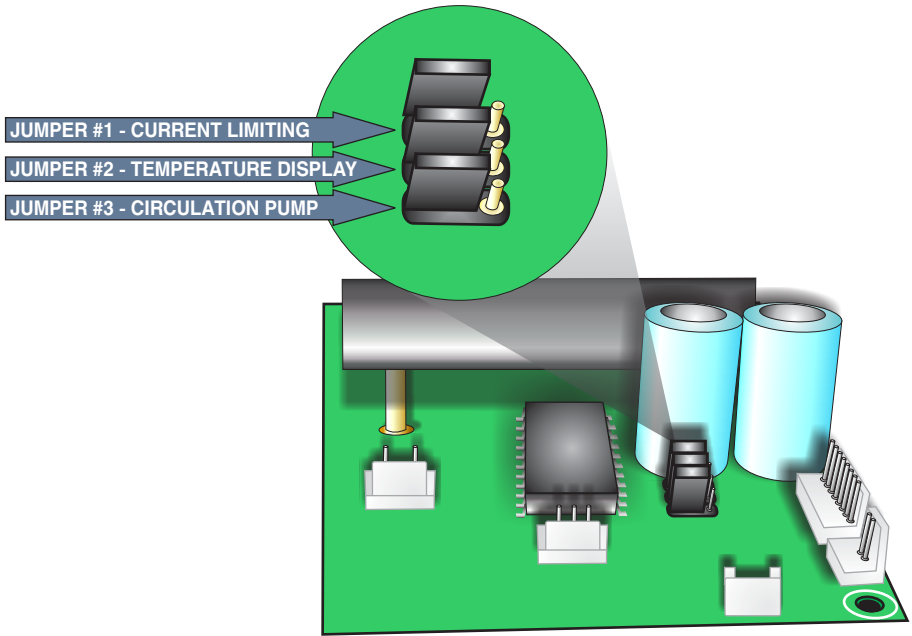

JUMPER 1 = Current Limiting:

Position 1 - (High Current 240vac): There is no current restriction. This allows the heater to operate with the pump in high speed.

Position 2 - (Low Current 120vac): The system will not turn the heater on when the pump is in high speed. The heater indicator will flash on the spaside to tell the user that there is a call for heat but the heater is not allowed to start.

JUMPER 2 = Temperature Display:


Position 1 - Fahrenheit Degrees

Position 2 - Celsius Degrees


JUMPER 3 = Circulation Pump:

Position 1 - System without a Circ. Pump

Position 2 - System with a Circ. Pump

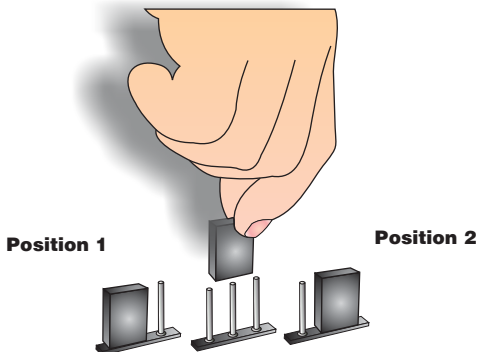

9230/6230 - BASIC OPERATION

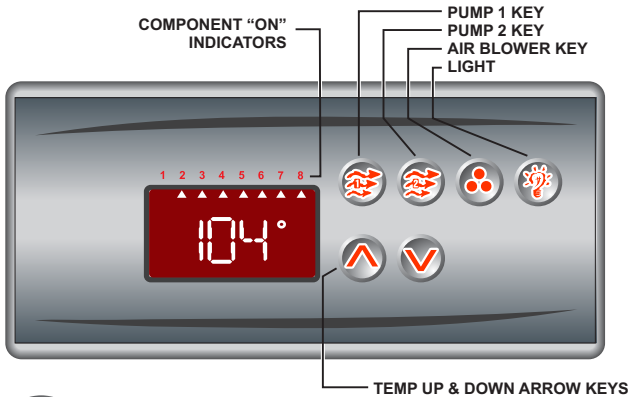

1	Not Used
2	Pump 1 "On"
3	Pump 2 "On"
4	Blower "On"
5	Light "On"
6	Filter Cycle Active
7	Heater "On"
8	Set Temp Displayed



Pump 1 Key: Press this key once to turn Pump 1 on. A second press will turn it off. For dual speed pump operation; Press this key once to turn Pump 1 onto Low speed, press this key a second time to turn Pump 1 onto High speed, a third press will turn the pump off. A built-in timer will shut the pump off after 20 minutes of operation unless done so manually. The Pump 1 Icon will appear on the LCD while the pump is running in High speed and flash while it is in Low speed. If the filter icon appears, a filtration cycle has begun and you will not be able to turn the pump off.



Pump 2 Key: Press this key once to turn Pump 2 on. A second press will turn it off. A built-in timer will shut the pump off after 20 minutes of operation unless done so manually. The Pump 2 Icon will appear while the pump is running in High speed.



Air Blower Key: Press this key once to turn Air Blower on. A second press will turn the Air Blower off. A built-in timer will shut the blower off after 20 minutes of operation unless done so manually. The Air Blower Icon will appear while the blower is running.



Light Key: Press this key to turn the light on. A second press will turn the Light off. If equipped with Fiber Optic: Press this key once to show "L1". Use the Up arrow key to turn the light on and off. Press the light key a second time, "F1" will appear. Use the Up arrow key to turn the Fiber Optic wheel and light on, Fiber Optic wheel off with light on and both Off. The light will automatically shut off after 2 hours. The Light Icon will appear while the light is on.



Temperature Set Keys: Press the Up Arrow key to increase the desired temperature. Press the Down Arrow key to decrease the temperature. The temperature can be adjusted in 1°F increments from 59°F to 104°F (5°C to 40°C). The new setting will remain on the display for 5 seconds as a confirmation. During this time the Set Point icon will be appear to let you know this is the desired and not the actual temperature. After 5 seconds the display will return to the current temperature reading. When the temperature drops to 1BF below the set temperature, the heater will be turned on until the temperature is 1°F above the set temperature. The heater icon will appear while the heater is on and flash when there is a call for heat and the heater has not yet been activated.

Power Loss: Any interruption of power will cause the unit to reset and revert to the default programming of 100°F set point temperature and 2, 2-hour filtration cycles.

Note: Your system may be equipped with "memory". If so, upon power loss, all programmed settings will be saved.